

User Manual-KA80

Function and Features

Super Quiet, compact design;
Easy,fast and secured installing on track;
High efficiency, big torque and stable weight Capacity ;
Automatic limit and easy setting;
Manual operating and touch start;
Soft start and stop;
Changeable speed;
Wireless, dry contact and high voltage controlling;
Smart RS485, smart mobile controlling;

Specifications

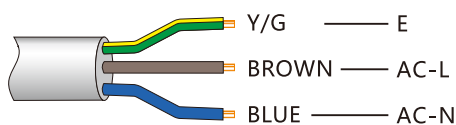
Voltage: AC100-240V / 50-60Hz
Full-Load Power: 50Wmax
Output RPM: 30-90RPM, 30-110RPM,
30-130RPM
Rated Torque: 1.2Nm
Rated Current: 0.489A@100V/60Hz,
0.543A@100V/50Hz,
0.251A@240V/60Hz,
0.254A@240V/50Hz.

RF: ASK433.92MHz
Protection class: IP41
Insulation class: E
Working Time: S2:10min


Controlling and wiring diagram

1、KA80 high voltage wiring diagram


KA80A (Built-in RF receiver) power wiring diagram



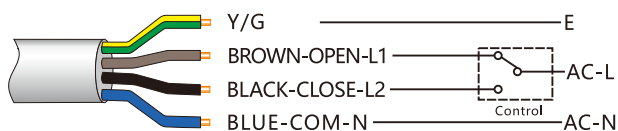
KA80C(External RF receiver) power wiring diagram



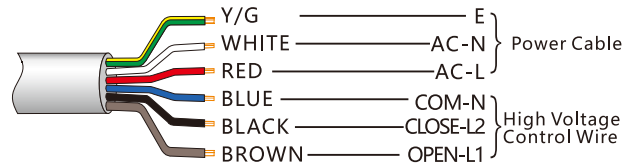KA80AC(Built-in RF receiver) power wiring diagram





2、KA80A(Two motors in one track)

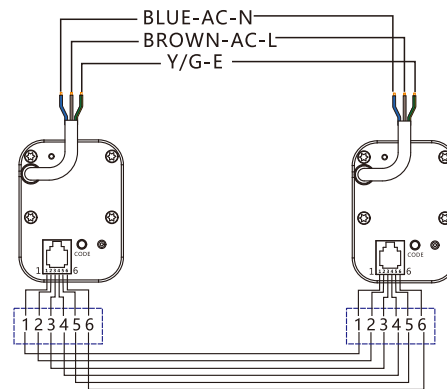

Attention: Two motors in one track,special notifications prior to ordering. Only one out of 2 motors is allowed to program with the remote to control the 2 motors.








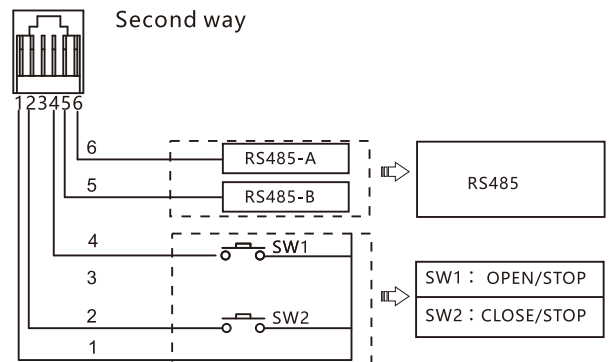
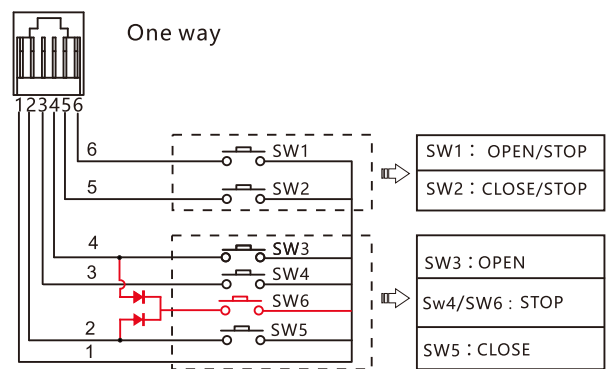
3、low voltage wiring diagram (KA80A/KA80AC only)





Attention: 1. In all controlling logic above, the signal is dry contact pulse and duration 1 second.
2.Support by specific RS485 program.

Function setting

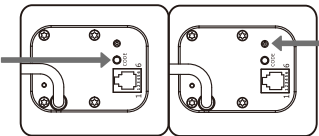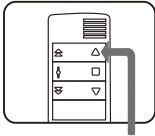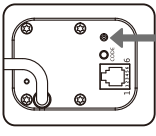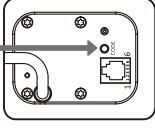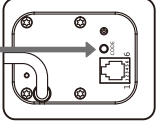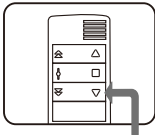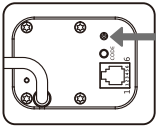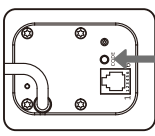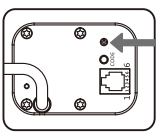
Programby "C" button

Setting Function	1st: Enter Setting Mode	2nd: Setting	3rd: Completed
Programming	 <p>Press and hold the Motor [C] button about 3 seconds, the indicator light stays ON.</p>	 <p>Click the remote control "up/open" button.</p>	 <p>The LED flashes 3 times and goes out, the programming is done.</p>
Clear codes		 <p>Press and Hold "C" button again about 3 seconds</p>	 <p>The LED flashes 3 times and goes out, the programming clearing is done.</p>
Reverse turning		 <p>Press The DOWN button in the remote.</p>	 <p>The LED flashes 3 times and goes out, the reverse turning is corrected.</p>
Clear limit		 <p>Press "C" button 3 times consecutively. H</p>	 <p>The LED flashes 3 times and goes out, the limit clearing is done.</p>

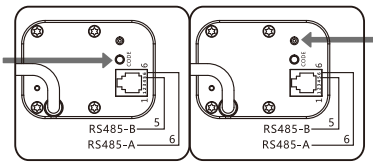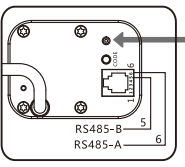Programby RS485:

Setting Function	1st: Enter Setting Mode	2nd: Setting	3rd: Completed
Programby RS485	 <p>Press and Hold "C" button again about 3 seconds till the LED stays illuminated, and enter setting mode.</p>	<p>Within 15 seconds, send "OPEN" command to the motor.</p>	 <p>The LED flashes 3 times and goes out, the programming by RS485 is done.</p>

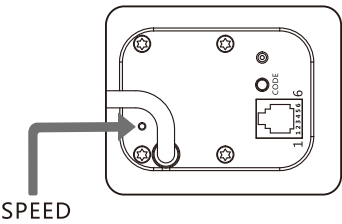Speed Setting: There are 3 gears to select, Green = 90RPM, Yellow= 110RPM, Red=130RPM



- ①、 Press and Hold "Speed" button again about 3 seconds, the LED color turns to Green, it is 1st gear.
- ②、 Press and Hold "Speed" button again about 3 seconds, the LED color turns to Yellow, it is 2nd gear,
- ③、 Press and Hold "Speed" button again about 3 seconds, the LED color turns to Red, it is 3rd gear,